


# User's Manual Thermal Barcode Printers

# **GP-3120TL**

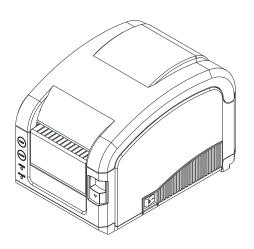

**Proficient in Commercial POS Receipt Printers** 

1.	Introduction	.2
	1.1 Safety Warning	2
	1.2 Note	2
2.	General Information	.3
	2.1 Introduction	3
	2.2 Main Features	3
3.	Printer Parts	3
4.	Paper Roll Installation	5
	Specification	
	5.1 Specification Table	
6.	Setting Up the Printer	.8
	6.1 Unpacking	8
	6.2 Power Cable Connection	8
	6.3 Data Cable Connection	8
	6.4 Media Installation	8
7.	Power On Utilities	.8
	7.1 Self-Test	8
	7.2 Gap Sensor Calibration	.9
	7.3 Hexadecimal Dumping	.10
	7.4 Skip AUTO.BAS	.10
	7.5 Printer Initialization	.11
8.	Indicators and Buttons	11
	8.1 Indicators	.11
	8.2 Buttons	.11
9.	Maintenance	12
	9.1 Printer Cleaning	12



#### 1 . Introduction

Thanks for choosing our new thermal label printer GP-3120TL. This product provides reliable performance and high printing quality at economic price. With powerful functions and easy operation design, GP-3120TL is your best choice of thermal label printer.

# **A** CAUTION, NOTE

**CAUTION:** MUST COMPLY, OTHERWISE HUMAN GET HARM AND DEVICES DAMAGE.

A NOTE: IMPORTANT INFOMATION AND TIPS FOR PRINTERS OPERATION.

#### SAFETY WARNING

PLEASE READ THE BELOW WARNINGS AND NOTES CAREFULLY BEFORE USING THE PRINTER.

#### 1.1 SAFETY WARNING

A CAUTION: THE PRINT HEAD IS A HEATED PART, PLEASE DO NOT TOUCH THE PRINT HEAD AND OTHER PARTS AROUND IT IN AND AFTER THE PRINTING PROCESS.

**A** CAUTION: DO NOT TOUCH THE PRINT HEAD AND PLUG-IN PARTS TO AVOID PRINT HEAD DAMAGE.

**A** CAUTION: DO NOT TOUCH THE PAPER TEAR-OFF KNIFE TO AVAOD GETTING HARM.

#### 1.2. Safety Notice:

- \* Don't touch the printer head with anything.
- \* Don't touch the cutter blade.
- \* Don't bend the power cord excessively or place any heavy objects onto it.
- \* Don't use the printer when it is out of order. This can cause a fire or and electrocution.
- \* When connecting or disconnecting the plug, always hold the plug but not the cord.
- \* Keep the desiccant out of children's reach.
- \* Use only approved accessories and do not try to disassemble, repair or remodel it by vourself.
- \* Install the printer on the stable surface. Choose firm, level surface where avoid vibration.
- \* Don't let water or other foreign objects into the printer.
- \* Don't connect a telephone line into the peripheral drive connector.
- \* We recommend that you unplug the printer from the power outlet if no use it for a long period .



#### 2 . General Information

#### 2.1 Introduction


GP-3120TL is designed for real-time and batch label printing, which is applicable in the field of transportation, logistics, post, retail sale, and etc. The printer can be connected with other equipment with USB interface cards, . It supports different paper media, including thermal paper roll, thermal label paper and sticker paper.

The printer provides direct thermal printing at selectable printing speed of 2.0, 3.0, 4.0 and 5.0 inches per second. It accepts roll feed, die-cut and fan-fold labels. All common bar code formats are available. Font and bar codes can be printed in 4 directions and in 1 to 10 times enlargement size. High performance and efficiency of label printing save your time!

#### 2.2 Main Features


- Built-in power adapter.
- Support thermal paper roll, thermal label paper and sticker paper.
- Support printing media width from 20mm to 80mm.
- Auto paper adjusting function.
- Auto temperature control for durable printing.
- Module design for different application.

#### 3 . Printer Parts

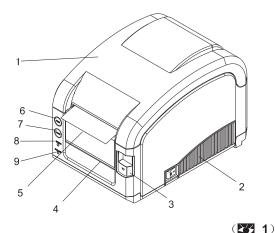

- 1- Top Cover
- 2- Base housing
- 3- Top Cover Open Button
- 4- Backing Paper Opening
- 5- Label Opening 6- Feed Button
- 7- Pause Button
- 8- Error Indicator
- 9- ONLINE/POWER Indicator


# Grinter

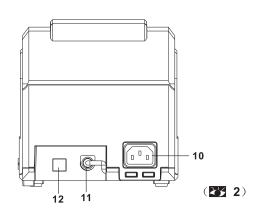

10- Power

11- Power Jack

12- USB Interface

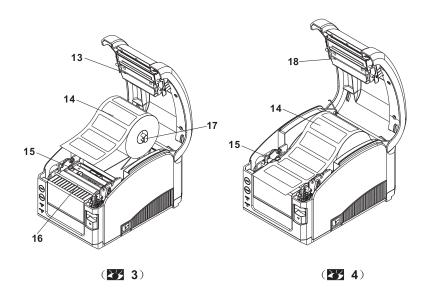


13- Print Head 14- Paper Roll 15- Label Guide 16- Paper Presence Sensor

17- Paper Roll Spindle 18- Light Transmission Sensor Light Source



### 4. Paper Roll Installation


(1) Insert the paper roll spindle into a paper roll, and place the paper roll into the printer. Fixing tab on the paper roll spindle should be inside the internal paper roll mount. Adjust the paper roll spindle position with the paper roll mount.

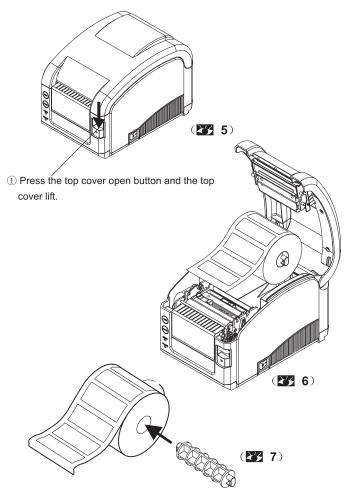

② Insert the paper roll spindle into the paper roll, and adjust the spindle position to make it in the center of the paper roll.

# Grinter

③ Place the paper roll into the internal paper roll mount. Please make sure the paper printing side face up as shown in the below photo.

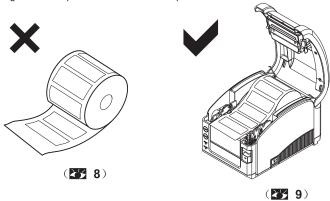



## 5. Specification

## 5.1 Specification Table

		Parameter
	Printing method	Direct Thermal
	Resolution	203DPI
	Print width	Max.76mm
	Print speed	Max. 127mm/s; Min. 101mm/s
Print	Memory	DRAM: 2M FLASH: 2M
	Print head temperature sensor	Thermal Sensitive Resistance
	Print head position sensor	Microswitch
	Paper detection sensor	Photoelectricity sensor
	Interface	USB,
Bar code	Bar code	CODE128, EAN128, ITF, CODE39, CODE93, EAN13, EAN13+2, EAN13+5, EAN8, EAN8+2, EAN8+5, CODABAR, POSTNET, UPC-A, UPCA+2, UPCA+5, UPC-E, UPCE+2, UPC-E+5, CPOST, MSI, MSIC, PLESSEY, ITF14, EAN14
Font Graphics	Internal font	FONT 0 to FONT 8 Simplified Chinese, Traditional Chinese and Korean
	Enlargement & rotation	1 to 10 times enlargement in both directions 0°, 90°, 270°, 360° rotation
	Graphics	Mono PCX and BMP files can be downloaded into FLASH and DRAM
	Media type	Continuous, sticker, fan-fold, etc
	Media width	20mm ~ 80mm
Media	Media diameter	Max. 100mm
	Media core diameter	Min. 25mm
	Paper off mode	Tear off and Peel off
Power	Input	24V DC/2A
	Work	5 ~ 45°C, 20 – 80%RH
Environment condition	Storage	-40~55°C, ≤93%RH (40°C)
Physical	Diameter	215(L) x 148(W) x 155(H)mm
dimension	Weight	1.4kg

The printer supports both continuous and non-continuous paper.

- Continuous type: Paper roll
- Non-continuous type:
  - 1) Label roll;
  - 2) Sticker paper.



#### 6 . Setting Up the Printer

#### 6.1 Unpacking

Please unpack the printer package, and inspect the parts according to the packing list. If any parts are missing or damaged, please contact the customer service of your purchased reseller or distributor.

#### 6.2 Power Cable Connection

( 35 10)

2201/ DC

- 1) Make sure the printer power switch is OFF;
- 2) The printer power jack is a 3-pin socket and for 220V DC power input. Please plug the DC cord connector into the printer's power jack properly.

# A CAUTION:

- When connecting or disconnecting the plug, always hold the plug but not the cord.
- Avoid pulling the power cord, otherwise any damages may cause a fire or electrocution.
- Avoid placing the power cord around other over heated equipment to prevent power cord melting, which may cause a fire or electrocution.
- We recommend that you unplug the printer from the power outlet if no use it for a long period

#### 6.3 Data Cable Connection

- 1) Make sure the printer power switch is OFF.
- 2) Plug the USB cable connector into the printer's interface properly.
- 3) Plug the other end of the data cable with the host computer.

# A CAUTION:

■ Please do not plug the data cable when the printer power is ON.

#### 6.4 Media Installation

To install the sticker paper and label roll, please refer"4. Paper Roll Installation".

#### 7 . Power On Utilities

There are five power-on utilities to set up and test printer hardware. These utilities are activated by pressing FEED button and PAUSE button.

#### 7.1 Self-Test

To start the printer self-test, please follow the below steps,


- 1. Turn off the printer power.
- 2. Make sure the paper roll is installed correctly and the printer top cover is closed.
- **3.** Press the FEED button and turning on the printer power simultaneously. When the self-test paper (chart 21) comes out, release the FEED button.



#### Self-test Page Sample:

SELFTEST.....Self-test Mode

MODEL: GP3120TL.....Model name



(**3**3 11

 VERSION: V1.0.
 Firmware version

 INTERFACE: USB.
 Interface type

 SPEED: 4.
 Print speed

 DENSITY: 7.
 Print darkness

 SIZE: 76 mm, 60 mm
 Paper width

 GAP: 0 mm, 0 mm
 Gap distance

 CODE PAGE: 437
 Code page

 MILAGE (m): 44.7999999
 Printed mileage (meter)

 REFERENCE: 0 mm, 0 mm
 Reference offset

 DIRECTION: 0, 0
 Print direction

 SHIFT: 0
 Label print offset

 OFFSET: 0
 Paper tear-off offset Printer functions

\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*

button function

\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*

 DRAM FILE:
 0 FILE (S)

 FLASH FILE:
 0 FILE (S)

 SECTOR SIZE:
 4 KB

PHYSICAL DRAM: 2048 KBYTES

AVAILABLE DRAM: 1024 KBYTES FREE

PHYSICAL FLASH 2048 KBYTES

AVAILABLE FLASH 1024 KBYTES FREE

Numbers of download files Physical & available memory space

#### 7.2 Gap Sensor Calibration

Gap sensor sensitivity should be calibrated at the following conditions

- 1. A brand new printer
- 2. Label stock changed
- 3. Printer initialization



This function is to reset the label gap sensor sensitivity when the printer power is turned on. User needs to start the calibration of the gap sensor sensitivity after loading a different type of label roll or the printer is initialized.

#### Please follow the steps below to calibrate the gap sensor:

- A. Through Driver Property: Set label paper dimension, label gap in Driver Property, click Apply and then print a label, after printing, printer will calibrate the label automatically, label parameter will be written into memory.
- B. Through sending commands: Write label paper dimension and gap into program and then print a label, printer will calibrate the label paper automatically.

#### 7.3 Dump mode

Please follow the steps below:

- 1. Turn off the printer power.
- 2. Make sure the label roll is installed correctly and the printer top cover is closed.
- 3. Press and hold on the PAUSE button, then turn on the printer power. When the POWER indicator (blue light) and ERROR indicator (red light) light simultaneously, release the buttons. The printer is changed to Dump Mode and print as below chart.

**(25 12)** 

**Note:** Printer will not print if data is not more than one piece of label, and need to press FEED button to force the printer to print it out.

#### 7.4 Skip AUTO.BAS

User can download an auto execution file (AUTO.BAS) to flash memory. Printer will run the AUTO.BAS program immediately when turning on printer power. The AUTO.BAS program can be interrupted by the power-on utility.

#### Please follow the steps below to skip the AUTO.BAS:

- 1. Turn off the printer power.
- 2. Press and hold on the PAUSE button and FEED button, then turn on the printer power. When the POWER indicator (blue light) dims and ERROR indicator (red light) lights, release both buttons. The printer skips running the AUTO.BAS program. And then the POWER indicator lights.



#### 7.5 Printer Initialization

Printer initialization is used to clear DRAM and restore printer settings to defaults. Please do the gap sensor sensitivity calibration after the printer initialization.

#### Please follow the steps below to initialize the printer:

- 1. Turn off the printer power.
- 2. Press and hold on the PAUSE button and FEED button, then turn on the printer power. When the POWER indicator (blue light) lights and ERROR indicator (red light) dims, release both buttons. The printer DRAM is cleared and printer settings are restored to defaults.

#### 8. Indicators and Buttons

The printer has two indicators (POWER indicator in blue light and ERROR indicator in red light) and two buttons (PAUSE and FEED).

#### 8.1 Indicators:

Item	Indicators Status	Descriptions
1	POWER indicator is ON ERROR indicator is OFF	Printer is powered on and in normal print mode.
2	POWER indicator flashes slowly (640ms) ERROR indicator is OFF	Printer is paused.
3	POWER indicator flashes fast (160ms) ERROR indicator is OFF	Printed label is peel-off but not taken off.
4	POWER indicator is OFF ERROR indicator flashes fast (160ms)	Printer cover is opened.
5	POWER indicator is OFF ERROR indicator flashes slowly (640ms)	Paper shortage or gap sensor calibrated error.
6	POWER indicator flashes fast (160ms) ERROR indicator flashes fast (160ms)	Printer overheated protection is activated. After 1 minute, the printer will check again the temperature of print head. If the temperature gets right, printer resumes working.

#### 8.2 Buttons

0.2 Buttons		
Item	Functions	Descriptions
1	Feed	Press the FEED button when POWER indicator is on and ERROR indicator is off. It feeds the label to the beginning of the next label
2	Pause	Press the feed button during printing and the printing job is suspended.
3	Self-test	Turn off the printer power.     Make sure the paper roll is installed correctly and the printer top cover is closed.     Press the FEED button and turning on the printer power simultaneously. When the self-test paper comes out, release the FEED button.



4	Gap sensor calibration	Set label specification in driver property or by sending commands, then print a label, printer will automatically calibrate the label paper.
5	Dump mode	1. Turn off the printer power. 2. Make sure the label roll is installed correctly and the printer top cover is closed. 3. Press and hold on the PAUSE button and FEED button, then turn on the printer power. When the POWER indicator (blue light) and ERROR indicator (red light) light simultaneously, release both buttons. The printer is changed to Dump Mode.

#### 9. Maintenance

#### 9.1 Printer Cleaning

To ensure the printing quality, please proceed this maintenance section to keep your printer in good conditions and extend its life.

Please use one of following material to clean the printer:

Cotton swab

Lint-free cloth

Vacuum / Blower brush

100% ethanol

#### The cleaning process is described as following

Printer Part	Method
Print Head	Turn off the printer power before cleaning the print head.     Allow the print head to cool for at least one minute.     Use a cotton swab and 100% ethanol to clean the print head surface.
Platen Roller	Turn off the printer power.     Rotate the platen roller and use a cotton swab or lint-free cloth to wipe it thoroughly with 100% ethanol.
Exterior	Wipe it with water-dampened cloth.
Interior Use a vacuum or blower brush to clean the dust.	

#### Note:

- Always turn off the printer power before cleaning the printer.
- Do not touch print head by hand. Tweezers is not allowed to use for cleaning, otherwise the print head, platen roller or sensor may be damaged.
- Please use 100% ethanol. DO NOT use medical alcohol, gasoline or acetone, which may damage the print head and platen roller.
- Do the sensor calibration after cleaning the sensors.
- Only turn on the printer and resume printing job after the ethanol volatilized.

# **A** WARNING:

All rights reserved. No part of this publication may be reproduced, stored in a retrieval, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Gainscha (Hong Kong) International Limited. The company reserves the rights of modifications of manufacture technology, assembly, software and hardware without notice. Contact your franchiser if you need further information about the product.

